

GOJO CXac™ & CXT™ DISPENSER INSTALLATION INSTRUCTIONS

These instructions apply to the GOJO® brand CXac and CXT dispensers.

Please carefully read all instructions before installing and using the dispenser.

TOUCH FREE COUNTER MOUNTED SYSTEM INSTALLATION GUIDE

If there is a dispenser currently installed



- Remove the existing unit, both the above and below counter assemblies
- Clean the counter area where the previous dispenser was located
- Verify the size of the existing counter hole is 15/16" to 1-1/4" in diameter

If there is no hole in the counter


- **Prior to drilling**, examine below counter to ensure adequate clearance for the new unit
- Drill a 1" diameter hole in the counter top
- The hole can be drilled to either the right or left of the faucet, ensuring adequate clearance for the below counter assembly
- Clean the counter area where the new hole is located

Installing the Touch Free Counter Mounted System


Prior to beginning installation, study the exploded view of the touch free counter-mounted system and locate all the pieces.

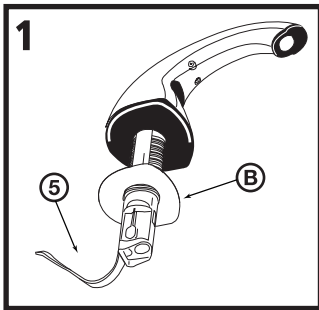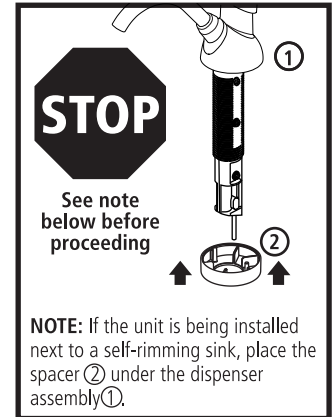


Remove the paper liner (B) from the adhesive gasket to expose the adhesive.

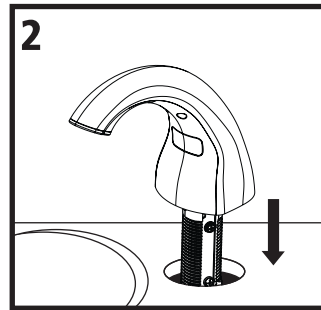

Feed the data cable (5) and the shank of the dispenser assembly (1) through the hole in the countertop. Point the spout of the dispenser into the sink bowl and press down firmly on the dispenser to securely attach it to the countertop.

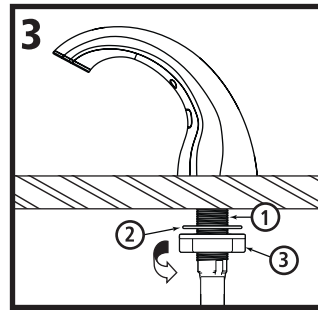


From underneath the counter, first feed the lock washer (2) and then the mounting nut (3) over the data cable (5) and onto the threaded shank of the dispenser assembly (1). Be sure that the "teeth" on the washer will touch the bottom of the counter top and that the nut threads easily onto the shank. (If the nut is hard to turn by hand, it is upside down.) hand-tighten the nut securely.

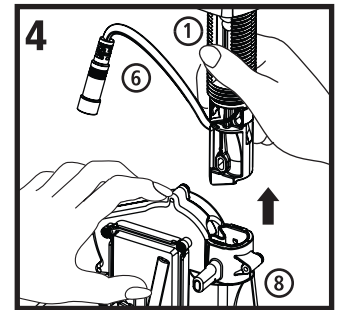


Align the indent inside the top of the motor assembly/bottle support (7) with the indent on the shank of the dispenser assembly (1) and firmly push the motor assembly/bottle support up, onto the shank.

NOTE: Hold the data cable (5) out of the way as you push up on the motor assembly/bottle support. Continue pushing upward until the vertical slots in the dispenser shank and the motor assembly/bottle support line up.

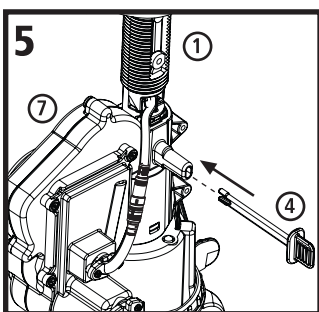

Secure the motor assembly/ bottle support (7) to the dispenser assembly (1) shank by pushing the retaining clip (4) into place through the vertical slots, until it goes all the way through the motor assembly.


NOTE: The clip may be inserted from either side.

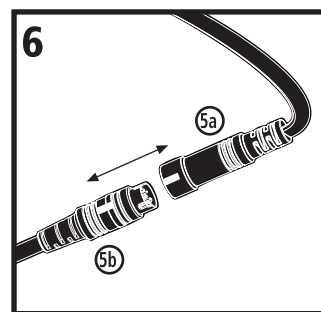

IMPORTANT: Connect the two halves of the data cable (5a) and (5b) by visually lining up the white stripes on each half and gently pushing the cable connectors together until the stripes touch. Improperly assembled connectors can cause unit to not function as intended.


NOTE: After the system is plugged into the outlet and the two halves of the data cable are connected, it will take approximately 20 seconds before the touch free counter mounted system is ready to dispense soap.

Refill Installation (refill sold separately)

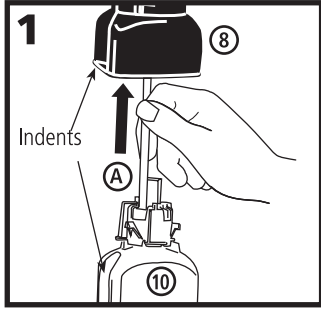


Feed the dispense tube (A) on the refill bottle (10) up through the motor assembly/bottle support (8) and dispenser assembly (1), aligning the two indents in the bottle and the support. Slide the Bottle upward until it snaps into place.

NOTE: The refill is not properly installed until you hear the "snap" (as the green release latch on the motor assembly/bottle support (8) engages).

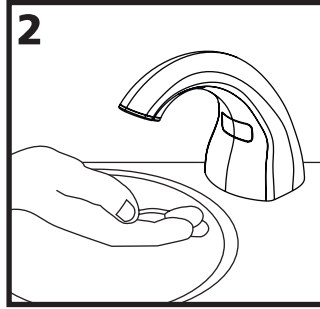


Test the system by passing your hand under the spout of the dispenser assembly (1) (in front of the sensor window) at least three or four times, until foam soap appears. If the system does not dispense soap after passing your hand in front of the sensor several times, repeat several more times. If no sound heard from motor assembly after placing hands in front of sensor, check to see that the data cable (5) halves are firmly connected, that the outlet is functional and the AC adapter is securely connected. Check for bent contact pins inside connector (5b). If unit is multi-activating, check for bent contact pins inside connector (5b).


Refill Removal

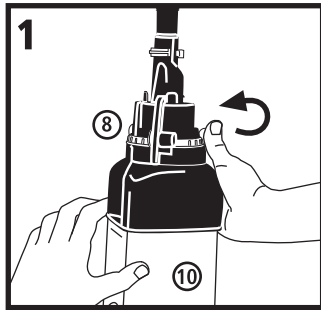

Grasp the empty Refill Bottle (10) with one hand and use the other hand to push the Green release latch on the motor assembly/bottle support (8) to the right (counterclockwise as seen from above).

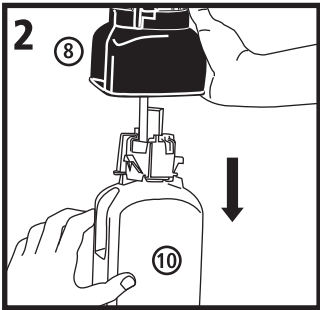

While still pushing the green release latch, pull downward on the refill bottle (10) and remove it from the motor assembly/bottle support (8).

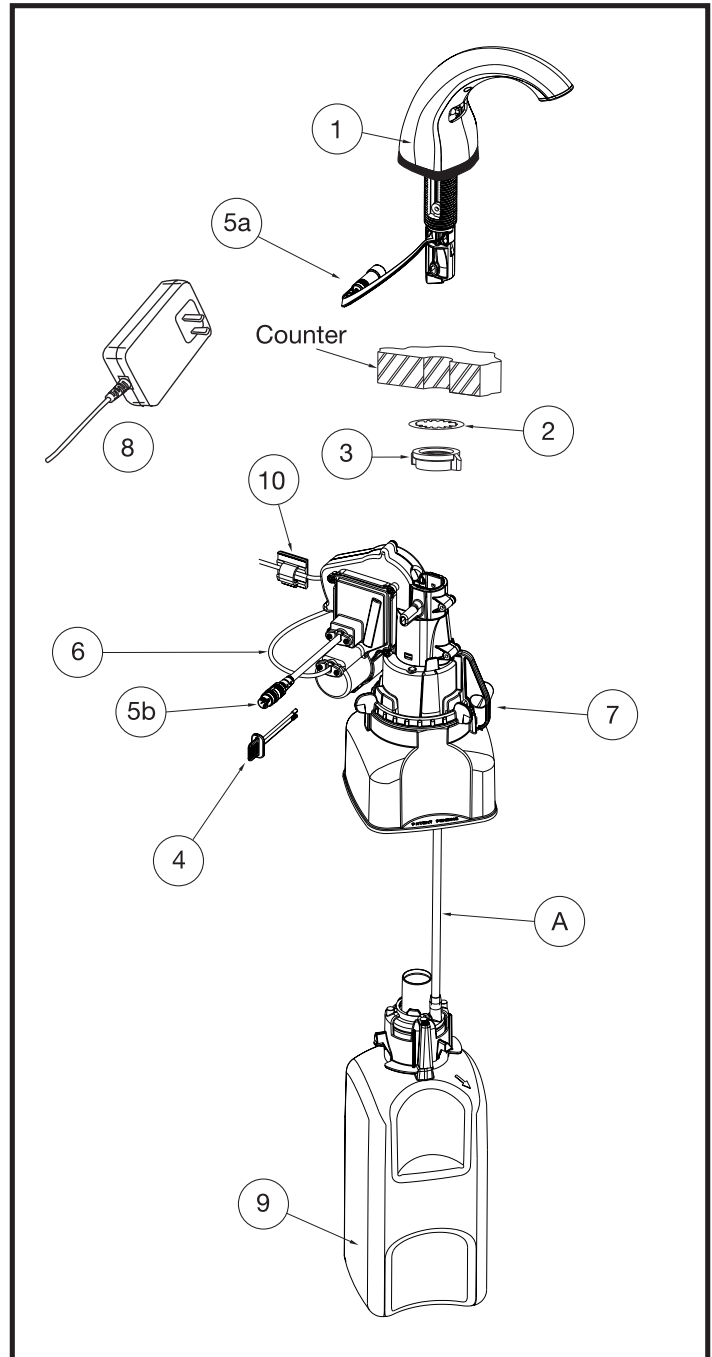

Cleaning the Counter Mounted System

Use only mild soap and water to clean the touch free counter mounted system spout. Cover the sensor window with your thumb while cleaning the spout so that you do not continue to dispense soap.

DO NOT use abrasives to clean the touch free counter-mounted system (since this may damage the finish or the sensor window).

| ITEM | DESCRIPTION | QTY. |
|------|---|------|
| 1 | DISPENSER ASSEMBLY | 1 |
| 2 | LOCK WASHER | 1 |
| 3 | MOUNTING NUT | 1 |
| 4 | RETAINING CLIP | 1 |
| 5 | DATA CABLE (2 HALVES WITH CONNECTOR - A and B) | 1 |
| 6 | POWER CABLE | 1 |
| 7 | MOTOR ASSEMBLY/BOTTLE SUPPORT | 1 |
| 8 | AC ADAPTER | 1 |
| 9 | REFILL BOTTLE (SOLD SEPARATELY) | 1 |
| 10 | WALL CLIP FOR POWER CABLE | 1 |



GOJO Industries, Inc.
One GOJO Plaza, Suite 500
P.O. Box 991 • Akron, OH 44309-0991
Tel: 1-330-255-6000 • Toll-free: 1-800-321-9647
Fax: 1-800-FAX-GOJO